


# Users manual/Használati útmutató

## ANGIE tremolo

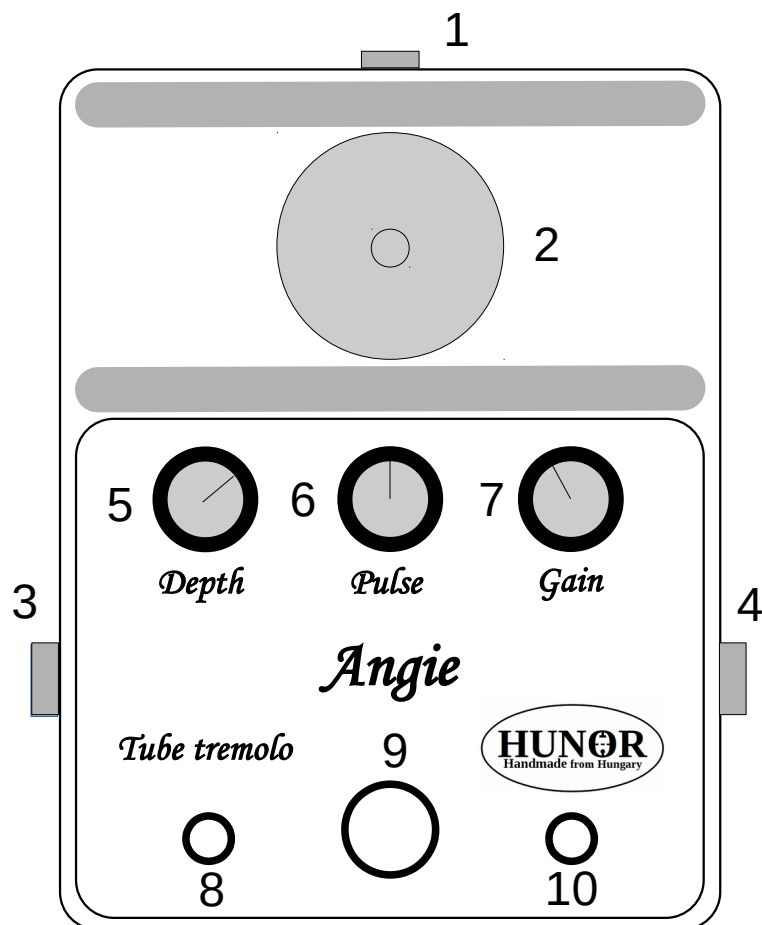

1. DC 12V power connector (centre negative, 5.5/2.5 mm). We recommend the use of the Hunor power supplies!
2. Tube socket with tube.
3. Output 6.3mm jack connector.
4. Input 6.3mm jack connector.
5. Depth pot, adjust the effect level.
6. Pulse pot, adjust the frequency of the LFO (Low Frequency Oscillator).
7. Gain pot, adjust the gain of the tube part.
8. Effect ON/OFF state indicator LED.
9. Footswitch for switching effect ON/OFF.
10. Indicator LED for displaying the frequency of the LFO.

1. DC 12V (center negatív, 5.5/2.5mm) tápcsatlakozó.
2. Elektroncső.
3. Kimenet, 6.3mm jack csatlakozó.
4. Bemenet, 6.3mm jack csatlakozó.
5. Depth potenciométer az effekt szintjének beállításához.
6. Pulse potenciométer a kisfrekvenciás oszcillátor (LFO) frekvenciájának beállításához.
7. Gain potenciométer a csöves fokozat erősítésének beállításához.
8. Effekt BE/KI állapotjelző LED
9. Lábkapcsoló az effekt BE/KI kapcsolásához.
10. Állapotjelző LED a kisfrekvenciás oszcillátor frekvenciájának kijelzéséhez.