


Users manual / Használati útmutató Little Sister

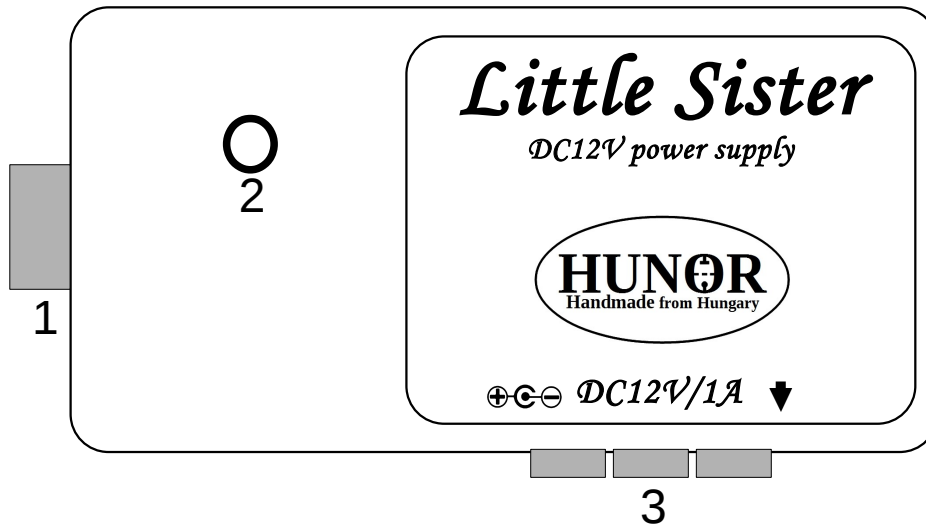

1. External power supply connector. (15V DC)
2. Status LED. It is RED, when the 12V DC outputs aren't OK. When the output voltage is good, it changes to GREEN (after cca. 30 sec after plugged into power network). If the light remains RED after 30 sec, unplug the device and search a short circuit in your power cables. If you checked and it's still not working, please contact us immediately
3. 12V DC/1A (total load) centre negative 5.5/2.5mm power connector for HUNOR pedals. Connecting two pieces of tube per connector allowed.

Attention!

Before you plug into the power network, connect all your devices with Little Sister power supplies!

1. Külső tápegység csatlakozó. (DC 15V)
2. Állapotjelző LED. PIROSan világít, míg a kimeneti feszültség nincs rendben. Mikor a kimenő feszültség megfelelő, ZÖLDre vált (kb. 30 másodperccel a hálózathoz történt csatlakoztatás után). Amennyiben a LED fénye 30 mp után is PIROS marad, válassza le a hálózatról, és keresse meg a rövidzárat a tápkábelekben. Amennyiben mindent rendben talált, de a hiba megmaradt, minél előbb vegye fel velünk a kapcsolatot!
3. DC 12V/1A (összterhelhetőségű) center negatív 5.5/2.5mm tápcsatlakozó a HUNOR pedálok részére. Csatlakozónként 2 db cső meghajtása megengedett.

Fontos!

A hálózathoz történő csatlakoztatás előtt kössön össze minden pedált a Little Sister tápegységgel!